



Installation Instructions for your Mission Iron Pedestal Stand

Items needed for Installation:

- 100 % clear silicon bathroom adhesive for installation of slab.
 - Electric drill with 5/32" masonry drill bit if attaching to concrete or tile floor.
 - (2) 3/16" x 1 1/4" masonry screws if attaching to a concrete or tile floor.
 - (2) #10 x 2" construction screws if attaching to a wood floor.
 - (2) # 10 x 2 1/2" construction screws for attaching to wall structure.
 - Level
 - Philips tip screwdriver and ratchet with 5/16" socket for masonry screw installation.
-

Directions:

- Carefully unpack components.
- Check fit of pedestal against wall surface, minor adjustments may need to be made to the pedestal that will ensure a proper fit to wall and floor.
- D'ontz strongly advises attaching to solid wood wall structure i.e. (stud or 2x4 nailer). See fig. 1-A. If mounting to masonry wall use appropriate masonry screws.

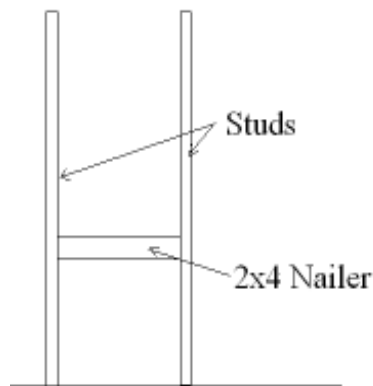


Fig. 1-A

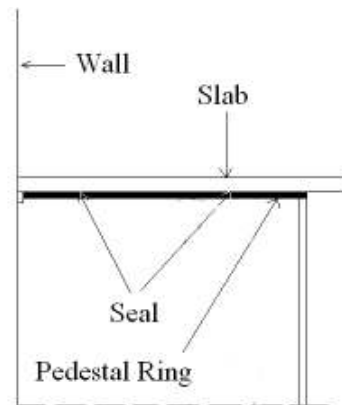


Fig. 1-B

- Level pedestal across the top ring and mount to wall structure using the #10 x 2 1/2 " construction screws.
- If floor is concrete or tile drill two 5/32" holes into floor through the base of the pedestal. Install two masonry screws to anchor pedestal to the floor.
- If floor is wood, screw two #10 construction screws through base of pedestal.
- Position slab so that it is centered on pedestal, flush against the wall before applying

silicon adhesive.

- While facing Pedestal from the front, gently lift slab from the side and apply silicon adhesive to at least 2 areas between slab and pedestal ring. Repeat on other side. See fig. 1-B. Allow proper curing time for adhesive before using.
- You are now ready for the Vessel installation.

Any questions with your installation, please call Customer Service
at (877) 322-3600. We will be happy to assist you.

Copyrights 2005, D'Vontz L.L.C. All Rights Reserved